



Product Name: Big Boss Lanyard

Part #: 21300; 21301; 21302; 21303; 21310

Instruction Manual

Do not throw away these instructions! Read and understand these instructions before using equipment!

Introduction	1
Applicable Safety Standards	1
Worker Classifications	1
Product Specific Applications	2
Limitations	2-3
Components and Specifications	3
Installation and Use	4
Maintenance, Cleaning, and Storage	5
Inspection	5
Inspection Log	5
Safety Information	6
Labels	7



Introduction

Thank you for purchasing a Guardian Fall Protection Big Boss Lanyard. This manual must be read and understood in its entirety, and used as part of an employee training program as required by OSHA or any applicable state agency.

This and any other included instructions must be made available to the user of the equipment. The user must understand how to safely and effectively use the Big Boss Lanyard, and all fall safety equipment used in combination with the Big Boss Lanyard.

User Information						
Date of First Use: Serial #: Trainer: User:						

Applicable Safety Standards

When used according to instruction specifications, this product meets or exceeds all applicable OSHA 1926 Subpart M, OSHA 1910, ANSI 2359.13-2013, and ANSI A10.32-2012 standards for fall protection. Applicable standards and regulations depend on the type of work being done, and also might include state-specific regulations. Consult regulatory agencies for more information on personal fall arrest systems and associated components.

Worker Classifications



Understand the following definitions of those who work near or who may be exposed to fall hazards.

Qualified Person: A person with an accredited degree or certification, and with extensive experience or sufficient professional standing, who is considered proficient in planning and reviewing the conformity of fall protection and rescue systems.

Competent Person: A highly trained and experienced person who is ASSIGNED BY THE EMPLOYER to be responsible for all elements of a fall safety program, including, but not limited to, its regulation, management, and application. A person who is proficient in identifying existing and predictable fall hazards, and who has the authority to stop work in order to eliminate hazards.

Authorized Person: A person who is assigned by their employer to work around or be subject to potential or existing fall hazards.

It is the responsibility of a Qualified or Competent person to supervise the job site and ensure all applicable safety regulations are complied with.



Product Specific Applications



Use of equipment in unintended applications may result in serious injury or death. Maximum 1 attachment per connection point.



Personal Fall Arrest: Big Boss Lanyard may be used to support a MAXIMUM 1 Personal Fall Arrest System (PFAS) for use in Fall Arrest applications. Structure must withstand loads applied in the directions permitted by the system of at least 5,000 lbs. Maximum free fall is up to 12' for workers from 130-310 lbs., and up to 6' for workers from 311-420 lbs. Applicable D-ring: Dorsal.



Restraint: Big Boss Lanyard may be used in Restraint applications. Restraint systems prevent workers from reaching the leading edge of a fall hazard. Always account for fully deployed length of lanyard/SRL. Structure must withstand loads applied in the directions permitted by the system of at least 1,000 lbs. No free fall is permitted. Restraint systems may only be used on surfaces with slopes up to 4/12 (vertical/horizontal). Applicable D-rings: Dorsal, Chest, Side, Shoulder.

For all applications: worker weight capacity range (including all clothing, tools, and equipment) is 130-310 lbs., or up to 420 lbs. if used in combination with equipment explicitly certified for such use.

Limitations

Fall Clearance: There must be sufficient clearance below the anchorage connector to arrest a fall before the user strikes the ground or an obstruction. When calculating fall clearance, account for a MINIMUM 3' safety factor, deceleration distance, user height, length of lanyard/SRL, and all other applicable factors.

Diagram shown is an example fall clearance calculation ONLY.

Swing Falls: Prior to installation or use, make considerations for eliminating or minimizing all swing fall hazards. Swing falls occur when the anchor is not directly above the location where a fall occurs. Always work as close to in line with the anchor point as possible. Swing falls significantly increase the likelihood of serious injury or death in the event of a fall.

FALL CLEARANCE CALCULATION Lanyard length (6' total) Deceleration Required distance (4' total) distance from anchorage (19' total) Height of harness dorsal D-ring from worker's feet (6' total) Safety factor (3' total)



Compatibility: When making connections with Big Boss Lanyard, eliminate all possibility of roll-out. Roll-out occurs when interference between a hook and the attachment point causes the hook gate to unintentionally open and release. All connections must be selected and deemed compatible with Big Boss Lanyard by a Competent Person, All connector gates must be self-closing and self-locking, and withstand minimum loads of 3,600 lbs. See the following for examples of compatible/incompatible connections:

Connector closed and locked to D-ring. OK.





Connector to integral lanvard. NΩ

Two or more snap hooks or carabiners connected to each other, NO.







Connector directly to webbina. NO.

Two connectors to same D-ring. NO.







Application that places load on gate. NΩ









Connector directly to horizontal lifeline. NO.

Components and Specifications

The specific components of Guardian Big Boss Lanyards vary depending on design and intended application. All webbing is made from Polyester and Nylon, and is 1" in width. All connectors (snap hooks or rebar hooks), are made from steel or aluminum. Contact Guardian Fall Protection with any questions regarding specific lanyard components or composition.

Refer to the following table for additional product-specific details:

Part #	Size	Description						
21300	6′	Big Boss Lanyard - Single Leg w/Stainless Steel Snap Hooks (2) & Extended Free Fall Shock Pack						
21301	6′	Big Boss Lanyard - Single Leg w/Stainless Steel Snap Hook (1) & Rebar Hooks (2), & Extended Free Fall Shock Pack						
21302	6′	Big Boss Lanyard - Double Leg w/Aluminum Snap Hooks (2) & Extended Free Fall Shock Pack						
21303	6′	Big Boss Lanyard - Double Leg w/Aluminum Snap Hook (1) & Rebar Hooks (2), & Extended Free Fall Shock Pack						
21310	6′	Big Boss Lanyard - Double Leg w/Snap Hook (1) & Rebar Hooks (2), 18″ Extension, & Extended Free Fall Shock Pack						



Installation and Use

- 1. Prior to use, inspect Guardian Big Boss Lanyard and all PFAS equipment to be used in combination with Big Boss Lanyard.
- 2. Ensure that all connectors and all other components of the PFAS are compatible with Big Boss Lanyard, and are selected by a Competent Person. The selected safety harness MUST be of proper size, and MUST be fitted snugly, but still allow for a full range of movement.
- 3. Make considerations for eliminating or minimizing swing fall hazards.
- 4. Ensure structure to which the anchorage connector is attached is capable of withstanding a MINIMUM load relative to the application in which the Big Boss Lanyard is to be used.
- 5. Attach lanyard snap hook to compatible harness D-ring. For lanyard with two, integrally connected legs, only attach the central snap hook to the applicable harness D-ring.
- 6. Attach remaining snap hook end of lanyard to compatible anchorage connector. Rebar Hooks MUST ONLY be connected to structural rebar. Ensure that all connectors are self-closing and self-locking, and that there is no risk of roll-out. ALWAYS maintain 100% tie-off.
- 7. Competent Person must make a determination regarding the acceptability of working above anchorage connector to which Big Boss Lanyard is attached.
- 8. Only use Big Boss Lanyard in the fall protection application(s) for which it is designed. Contact Guardian Fall Protection if unsure of proper application(s).





Maintenance, Cleaning, and Storage

If Big Boss Lanyard fails inspection in any way, immediately remove it from service, and contact Guardian to inquire about its return or repair.

Cleaning after use is important for maintaining the safety and longevity of Big Boss Lanyard. Remove all dirt, corrosives, and contaminants from Big Boss Lanyard before and after each use. If Big Boss Lanyard cannot be cleaned with plain water, use mild soap and water, then rinse and wipe dry. NEVER clean Big Boss Lanyard with corrosive substances

When not in use, store equipment where it will not be affected by heat, light, excessive moisture, chemicals, or other degrading elements.

Inspection

Prior to EACH use, inspect Big Boss Lanyard for deficiencies, including, but not limited to, corrosion, deformation, pits, burrs, rough surfaces, sharp edges, cracking, rust, paint buildup, excessive heating, alteration, and missing or illegible labels. IMMEDIATELY remove Big Boss Lanyard from service if defects or damage are found, or if exposed to forces of fall arrest.

Ensure that applicable work area is free of all damage, including, but not limited to, debris, rot, rust, decay, cracking, and hazardous materials. Ensure that selected work area will support the application-specific minimum loads set forth in this instruction manual. Work area MUST be stable.

At least every 6 months, a Competent Person other than the user must inspect Big Boss Lanyard. Competent Person inspections MUST be recorded in inspection log in instruction manual and on equipment inspection grid label. The Competent Person must sign their initials in the box corresponding to the month and year the inspection took place.

During inspection, consider all applications and hazards Big Boss Lanyard have been subjected to.

Inspection Log

Date	nt	First	IIse.	

Product lifetime is indefinite as long as it passes pre-use and Competent Person inspections. User must inspect prior to EACH use. Competent Person other than user must complete formal inspection at least every 6 months. Competent Person to inspect and initial.

This inspection log must be specific to one Big Boss Lanyard. Separate inspection logs must be used for each Big Boss Lanyard. All inspection records must be made visible and available to all users at all times.

	J	F	M	A	M	J	J	A	S	O	N	D
YR												
YR												
YR												
YR												
YR												

If equipment fails inspection IMMEDIATELY REMOVE FROM SERVICE.

GUARDIAN

Safety Information



Failure to understand and comply with safety regulations may result in serious injury or death. Regulations included herein are not all-inclusive, are for reference only, and are not intended to replace a Competent Person's judgment or knowledge of federal or state standards.

Do not alter equipment. Do not misuse equipment.

Workplace conditions, including, but not limited to, flame, corrosive chemicals, electrical shock, sharp objects, machinery, abrasive substances, weather conditions, and uneven surfaces, must be assessed by a Competent Person before fall protection equipment is selected.

The analysis of the workplace must anticipate where workers will be performing their duties, the routes they will take to reach their work, and the potential and existing fall hazards they may be exposed to. Fall protection equipment must be chosen by a Competent Person. Selections must account for all potential hazardous workplace conditions. All fall protection equipment should be purchased new and in an unused condition

Fall protection systems must be selected and installed under the supervision of a Competent Person, and used in a compliant manner. Fall protection systems must be designed in a manner compliant with all federal, state, and safety regulations. Forces applied to anchors must be calculated by a Competent Person.

Unless explicitly stated otherwise, the maximum allowable free fall distance for lanyards must not exceed 6'. No free fall allowed for non-LE SRLs. Class A SRLs must arrest falls within 24"; Class B SRLs must arrest falls within 54".

Harnesses and connectors selected must be compliant with manufacturer's instructions, and must be of compatible size and configuration. Snap hooks, carabiners, and other connectors must be selected and applied in a compatible fashion. All risk of disengagement must be eliminated. All snap hooks and carabiners must be self-locking and self-closing, and must never be connected to each other.

A pre-planned rescue procedure in the case of a fall is required. The rescue plan must be project-specific. The rescue plan must allow for employees to rescue themselves, or provide an alternative means for their prompt rescue. Store rescue equipment in an easily accessible and clearly marked area.

Training of Authorized Persons to correctly erect, disassemble, inspect, maintain, store, and use equipment must be provided by a Competent Person. Training must include the ability to recognize fall hazards, minimize the likelihood of fall hazards, and the correct use of personal fall arrest systems.

NEVER use fall protection equipment of any kind to hang, lift, support, or hoist tools or equipment, unless explicitly certified for such use.

Equipment subjected to forces of fall arrest must immediately be removed from use.

Age, fitness, and health conditions can seriously affect the worker should a fall occur. Consult a doctor if there is any reason to doubt a user's ability to withstand and safely absorb fall arrest forces or perform set-up of equipment. Pregnant women and minors must not use this equipment.

Physical harm may still occur even if fall safety equipment functions correctly. Sustained post-fall suspension may result in serious injury or death. Use trauma relief straps to reduce the effects of suspension trauma.



Labels



Big Boss Lanyard

Compliant with OSHA 1926 Subpart M, ANSI Z359.13-2013, and ANSI A10 32-2012

Capacity: 130-310 lbs. (including tools) up to 12 ft. free fall 311-420 lbs (including tools) up to 6 ft. free fall.

> Maximum Elongation:

Attach shock absorber end of lanyard to fall arrest D-ring on harness.

> DO NOT REMOVE LABELS

90033 (Rev. B)

Material:

Polyester and galvanized steel

For use only with other OSHA and ANSI compliant equipment as part of a complete personal fall arrest system. Improper use of this product could result in serious injury or death. Avoid

 
contact with sharp edges and abrasive surfaces that can cut or damage the webbing or components

Make only safe, compatible

Immediately remove this lanyard from service if exposed to forces of fall arrest.

WARNING

Prior to use, fully read and understand all manufacturer's instructions provided with this lanyard at time of shipment from manufacturer.



Competent Person to inspect and initial at least every 6 months.

Date of First Use (please complete)

Service life of product is 5 years from Date of First Use. USER MUST INSPECT BEFORE EACH USE

Extended Capacity Lanyard

Warning: User Capacity Range 130-310 lbs.

Read Instructions Before Use

Serial Number: Date of Manufacture: Model Number: Length: