## Ring of Fire SRL Bracket

## Part #: 11055

## Attachment:

1. Twist locking pin knob and compress and hold center button, then pull locking pin out of pin housing.

## 2. Adjust bars so large bar is at the top, and small bar is at the bottom.

3. At web loop beneath harness dorsal D-ring, hook large bar through web loop. DO NOT connect to D-ring. Hook small bar through connection points of SRLs.

4. To reassemble Ring of Fire SRL Bracket, first align inner pin with hole on small bar. Next, ensure ends of both small bar and large bar are aligned with locking pin.

5. Push center button, and ensure locking pin fully inserts through both small bar and large bar.

6. Red indicator on base of locking pin MUST NOT be visible.

ONLY for use with Guardian Fall Protection 6' Diablo SRLs, 11' Edge Series SRLs, and Yellow Jacket SRLs. NEVER for use with any other fall protection device.





