

GUARDIAN

FALL PROTECTION



Product Name: SkyMast

Part #: 00271; 00315; 00325; 00335; 00345

Instruction Manual

Do not throw away these instructions!

Read and understand these instructions before using equipment!

Introduction	1
Applicable Safety Standards	1
Worker Classifications	1
Product Specific Applications	2
Limitations	2-3
Components and Specifications	4
Installation and Use	5-8
Maintenance, Cleaning, and Storage	9
Inspection	9
Inspection Log	9
Safety Information	10
Labels	11

Introduction

Thank you for purchasing a Guardian Fall Protection SkyMast. This manual must be read and understood in its entirety, and used as part of an employee training program as required by OSHA or any applicable state agency.

This and any other included instructions must be made available to the user of the equipment. The user must understand how to safely and effectively use the SkyMast, and all fall safety equipment used in combination with the SkyMast.

User Information	
Date of First Use:	_____
Serial #:	_____
Trainer:	_____
User:	_____

Applicable Safety Standards

When used according to instruction specifications, this product meets or exceeds all applicable OSHA 1926 Subpart M, OSHA 1910, ANSI Z359.1-2007, and ANSI A10.32-2012 standards for fall protection. Applicable standards and regulations depend on the type of work being done, and also might include state-specific regulations. Consult regulatory agencies for more information on personal fall arrest systems and associated components.

Worker Classifications



Understand the following definitions of those who work near or who may be exposed to fall hazards.

Qualified Person: A person with an accredited degree or certification, and with extensive experience or sufficient professional standing, who is considered proficient in planning and reviewing the conformity of fall protection and rescue systems.

Competent Person: A highly trained and experienced person who is ASSIGNED BY THE EMPLOYER to be responsible for all elements of a fall safety program, including, but not limited to, its regulation, management, and application. A person who is proficient in identifying existing and predictable fall hazards, and who has the authority to stop work in order to eliminate hazards.

Authorized Person: A person who is assigned by their employer to work around or be subject to potential or existing fall hazards.

It is the responsibility of a Qualified or Competent person to supervise the job site and ensure all applicable safety regulations are complied with.

Product Specific Applications



WARNING

Use of equipment in unintended applications may result in serious injury or death. Maximum 1 attachment per connection point.



Personal Fall Arrest: SkyMast may be used to support a MAXIMUM 3 PFAS for use in Fall Arrest applications. Structure must withstand loads applied in the directions permitted by the system of at least 5,000 lbs. Applicable D-ring: Dorsal.

- MUST be used in combination with Leading Edge (LE) SRL. Maximum free fall is 2'.



Restraint: SkyMast may be used in Restraint applications. Restraint systems prevent workers from reaching the leading edge of a fall hazard. Always account for fully deployed length of lanyard/SRL. Structure must withstand loads applied in the directions permitted by the system of at least 1,000 lbs. No free fall is permitted. Restraint systems may only be used on surfaces with slopes up to 4/12 (vertical/horizontal). Applicable D-rings: Dorsal, Chest, Side, Shoulder.


For all applications: worker weight capacity range (including all clothing, tools, and equipment) is 130-310 lbs. per worker.

Limitations

Fall Clearance: There must be sufficient clearance below the anchorage connector to arrest a fall before the user strikes the ground or an obstruction. When calculating fall clearance, account for a MINIMUM 3' safety factor, deceleration distance, user height, length of lanyard/SRL, and all other applicable factors.

Diagram shown is an example fall clearance calculation ONLY.

Swing Falls: Prior to installation or use, make considerations for eliminating or minimizing all swing fall hazards. Swing falls occur when the anchor is not directly above the location where a fall occurs. Always work as close to in line with the anchor point as possible. Swing falls significantly increase the likelihood of serious injury or death in the event of a fall.

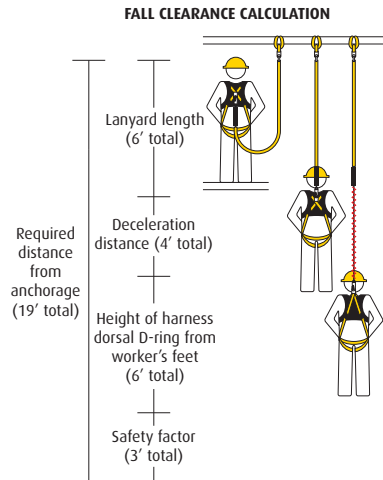

Compatibility: When making connections with SkyMast, eliminate all possibility of roll-out. Roll-out occurs when interference between a hook and the attachment point causes the hook gate to unintentionally open and release. All connections must be selected and deemed compatible with SkyMast by a Competent Person. All connector gates must be self-closing and self-locking, and withstand minimum loads of 3,600 lbs. See the following for examples of compatible/incompatible connections:

Connector closed and locked to D-ring. **OK.**



Connector to integral lanyard. **NO.**

Two or more snap hooks or carabiners connected to each other. **NO.**




Connector directly to webbing. **NO.**

Two connectors to same D-ring. **NO.**



Application that places load on gate. **NO.**

Incompatible or irregular application, which may increase risk of roll-out. **NO.**




Connector directly to horizontal lifeline. **NO.**

Correct Anchorage Positioning:

This chart details allowable working zones required to reduce risk of swing falls and improper side loading. ALWAYS adhere to information specified by chart.

Anchor Distance From Leading Edge (Y)	Working Distance Along Roof Edge (Either Direction) (X)	Working Angle From Perpendicular (θ)
6'	8'	53°
10'	9' - 9"	45°
15'	11' - 7"	38°
20'	13' - 3"	33°
25'	14' - 6"	30°
30'	16'	28°
35'	17' - 2"	26°
40'	18' - 3"	24°
45'	19' - 4"	23°
50'	19' - 10"	21°
55'	21' - 4"	21°
60'	22' - 3"	21°

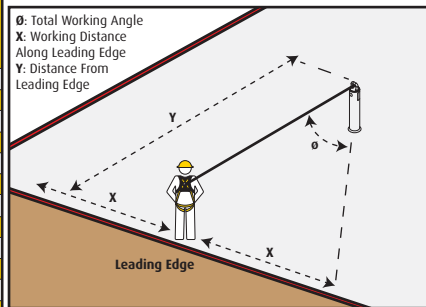


For example, if the anchorage connector is 6' from the leading edge (Y), the working distance (X) is 8' in each direction from the perpendicular, which translates to a 53° working angle.

Components and Specifications

Materials: galvanized steel.

SkyMast Skyhook Anchor and SRLs sold separately.

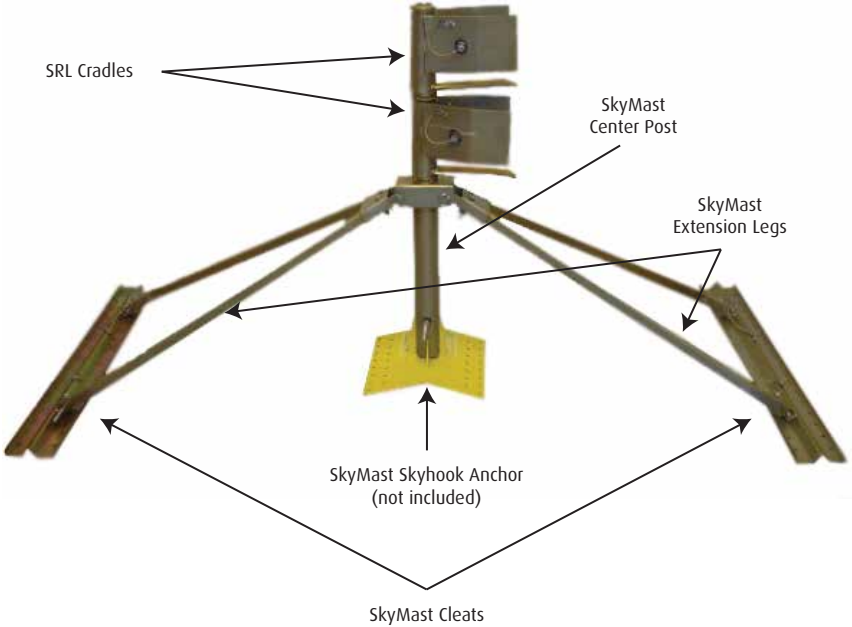

Part #	Weight	Description
00271	40.8 lbs.	SkyMast Anchor
00315	14 lbs.	SkyMast Skyhook. Applicable roof pitch: 1/12 - 3/12.
00325	14 lbs.	SkyMast Skyhook. Applicable roof pitch: 4/12 - 6/12.
00335	14 lbs.	SkyMast Skyhook. Applicable roof pitch: 7/12 - 9/12.
00345	14 lbs.	SkyMast Skyhook. Applicable roof pitch: 10/12 - 12/12.

Installation and Use

Prior to installation, plan your system:

1. PFAS equipment must be selected and deemed compatible with SkyMast by a Competent Person.
2. Eliminate or minimize all risk of swing fall.
3. Determine desired location for anchor; ensure location is free of debris, rot, decay, cracking, and hazardous materials. NEVER install on gable ends, fascias, rake ends, overhangs, bottom cords, collar boards, spliced sections, or substrate incapable of withstanding application minimum loads.
4. Ensure selected SkyMast Skyhook Anchor is compatible with pitch of installation location. SkyMast Skyhook Anchor MUST be used in combination with SkyMast. SkyMast Skyhook Anchor MUST be Part # 00315, 00325, 00335, or 00345.

SkyMast Skyhook Installation:

MINIMUM substrate requirements:

- Wood: 3/4" CDX or better.
- Metal: 20g or thicker.
- Concrete: 2,000 p.s.i. or better.

SkyMast Skyhook Anchor MUST install flush against substrate.


SkyMast Skyhook Anchors may be placed a MAXIMUM 16' apart.

SkyMast Skyhook Anchors MUST be placed a MINIMUM 10' from all leading edges of fall hazards.

1. Place SkyMast Skyhook Anchor over selected roof ridge. Anchor must lie flush with substrate.
 2. Ensure all fasteners are those supplied by Guardian Fall Protection, or are deemed compatible by a Competent Person.
- For installations on wood and metal, use (18) #14x10 2" screws or better. NEVER use nails.
 - For installations on concrete, use (18) concrete fasteners that have been selected and deemed compatible with SkyMast Skyhook Anchors by a Competent Person.




- Wood/Metal installation: Install SkyMast Skyhook with (18) #14-10 2" screws (9 per side), as shown. All fasteners **MUST** be installed through roof sheathing and into roof truss or other compatible support beam.
- Concrete installation: Must be done directly on substrate, and never through any intermediary substrates. Use same fastener configuration as wood/metal install.

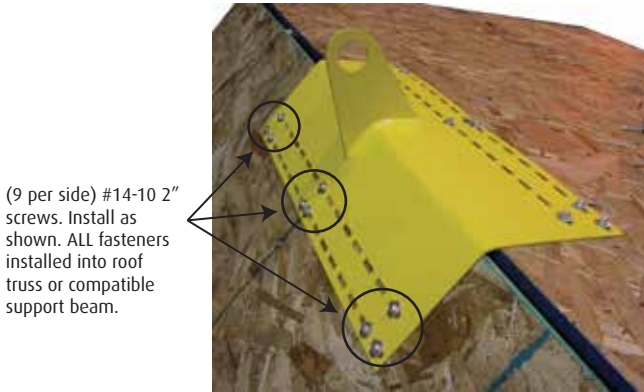


SkyMast Installation:


1. Attach SkyMast Extension Legs to SkyMast Cleats using (2) supplied and attached Dowel Pins.

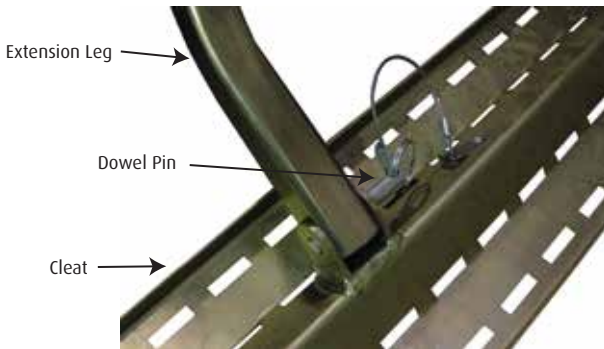


2. Place SkyMast Center Post over SkyMast Skyhook Anchor Connection Point. Secure Center Post to SkyMast Skyhook Anchor with supplied and attached Dowel Pin.

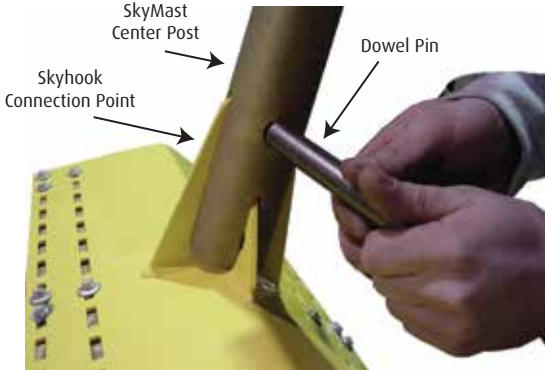

3. Attach assembled SkyMast Extension Legs and Cleats to Center Post, and secure with Dowel Pins.

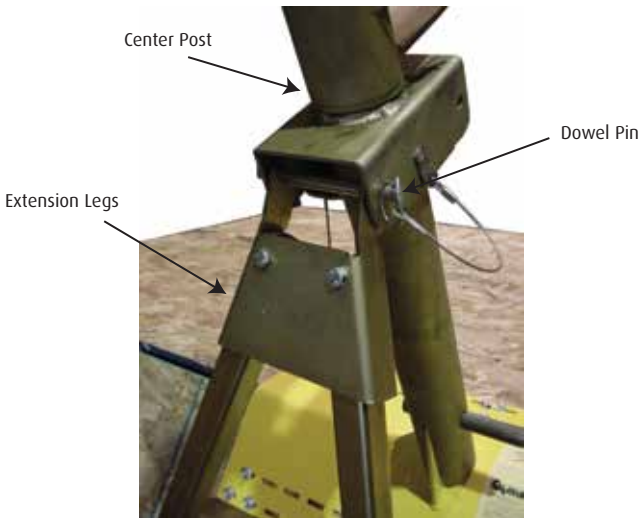

4. Install Cleats to roof with (24) #14-10 2" screws (12 per side), as shown. Fasteners **MUST** be installed through roof sheathing and be fully embedded into roof truss or compatible support beam. Install fasteners slightly off-center from each other to avoid splitting truss. Cleats **MUST** lie flush with substrate. If installing onto concrete, fasteners must be selected and deemed compatible by a Competent Person.

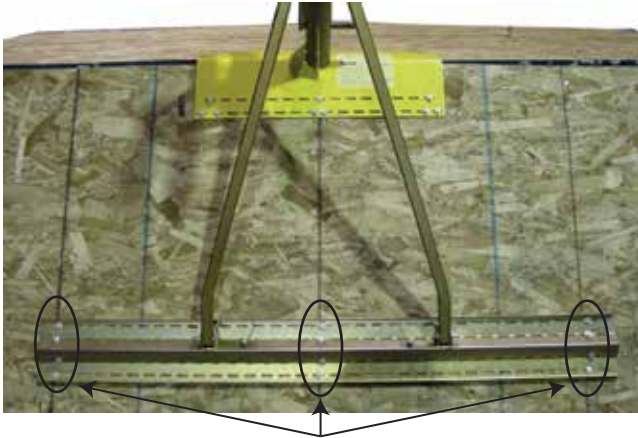

(12 per side) #14-10 2" screws installed through sheathing and into truss or support beam.

5. Attach compatible SRL to installation location(s) on SkyMast. Secure SRLs with supplied and attached Dowel Pins. Ensure SRL is fully installed and secured prior to use. **ALWAYS** read and understand all SRL manufacturer's instructions. Attach complete and compatible PFAS to SRL.

SRL installation locations



Maintenance, Cleaning, and Storage

If SkyMast fails inspection in any way, immediately remove it from service, and contact Guardian to inquire about its return or repair.

Cleaning after use is important for maintaining the safety and longevity of SkyMast. Remove all dirt, corrosives, and contaminants from SkyMast before and after each use. If SkyMast cannot be cleaned with plain water, use mild soap and water, then rinse and wipe dry. NEVER clean SkyMast with corrosive substances.

When not in use, store equipment where it will not be affected by heat, light, excessive moisture, chemicals, or other degrading elements.

Inspection

Prior to EACH use, inspect SkyMast for deficiencies, including, but not limited to, corrosion, deformation, pits, burrs, rough surfaces, sharp edges, cracking, rust, paint buildup, excessive heating, alteration, and missing or illegible labels. IMMEDIATELY remove SkyMast from service if defects or damage are found, or if exposed to forces of fall arrest.

Ensure that applicable work area is free of all damage, including, but not limited to, debris, rot, rust, decay, cracking, and hazardous materials. Ensure that selected work area will support the application-specific minimum loads set forth in this instruction manual. Work area MUST be stable.

At least every 6 months, a Competent Person other than the user must inspect SkyMast. **Competent Person inspections MUST be recorded in inspection log in instruction manual and on equipment inspection grid label. The Competent Person must sign their initials in the box corresponding to the month and year the inspection took place.**

During inspection, consider all applications and hazards SkyMast have been subjected to.

Inspection Log

Date of First Use: _____.

Product lifetime is indefinite as long as it passes pre-use and Competent Person inspections. User must inspect prior to EACH use. Competent Person other than user must complete formal inspection at least every 6 months. Competent Person to inspect and initial.

This inspection log must be specific to one SkyMast. Separate inspection logs must be used for each SkyMast. All inspection records must be made visible and available to all users at all times.

	J	F	M	A	M	J	J	A	S	O	N	D
YR												
YR												
YR												
YR												
YR												

If equipment fails inspection IMMEDIATELY REMOVE FROM SERVICE.

Safety Information



Failure to understand and comply with safety regulations may result in serious injury or death. Regulations included herein are not all-inclusive, are for reference only, and are not intended to replace a Competent Person's judgment or knowledge of federal or state standards.

Do not alter equipment. Do not misuse equipment.

Workplace conditions, including, but not limited to, flame, corrosive chemicals, electrical shock, sharp objects, machinery, abrasive substances, weather conditions, and uneven surfaces, must be assessed by a Competent Person before fall protection equipment is selected.

The analysis of the workplace must anticipate where workers will be performing their duties, the routes they will take to reach their work, and the potential and existing fall hazards they may be exposed to. Fall protection equipment must be chosen by a Competent Person. Selections must account for all potential hazardous workplace conditions. All fall protection equipment should be purchased new and in an unused condition.

Fall protection systems must be selected and installed under the supervision of a Competent Person, and used in a compliant manner. Fall protection systems must be designed in a manner compliant with all federal, state, and safety regulations. Forces applied to anchors must be calculated by a Competent Person.

Unless explicitly stated otherwise, the maximum allowable free fall distance for lanyards must not exceed 6'. No free fall allowed for non-LE SRLs. Class A SRLs must arrest falls within 24"; Class B SRLs must arrest falls within 54".

Harnesses and connectors selected must be compliant with manufacturer's instructions, and must be of compatible size and configuration. Snap hooks, carabiners, and other connectors must be selected and applied in a compatible fashion. All risk of disengagement must be eliminated. All snap hooks and carabiners must be self-locking and self-closing, and must never be connected to each other.

A pre-planned rescue procedure in the case of a fall is required. The rescue plan must be project-specific. The rescue plan must allow for employees to rescue themselves, or provide an alternative means for their prompt rescue. Store rescue equipment in an easily accessible and clearly marked area.

Training of Authorized Persons to correctly erect, disassemble, inspect, maintain, store, and use equipment must be provided by a Competent Person. Training must include the ability to recognize fall hazards, minimize the likelihood of fall hazards, and the correct use of personal fall arrest systems.


NEVER use fall protection equipment of any kind to hang, lift, support, or hoist tools or equipment, unless explicitly certified for such use.

Equipment subjected to forces of fall arrest must immediately be removed from use.

Age, fitness, and health conditions can seriously affect the worker should a fall occur. Consult a doctor if there is any reason to doubt a user's ability to withstand and safely absorb fall arrest forces or perform set-up of equipment. Pregnant women and minors must not use this equipment.

Physical harm may still occur even if fall safety equipment functions correctly. Sustained post-fall suspension may result in serious injury or death. Use trauma relief straps to reduce the effects of suspension trauma.

Labels



SkyMast Anchor

800-466-6385 6305 S. 231st St.
www.guardianfall.com Part #: 00271 Kent, WA 98032

Prior to use, read and understand all instructions provided with equipment at time of shipment from manufacturer.

Compliant with all OSHA 1910, OSHA 1926 Subpart M, ANSI Z359.1-2007, and ANSI A10.32-2012 regulations.


Worker capacity: 130-310 lbs. per worker (including all equipment).

Date of Manufacture: XXXXXXXXXX Equipment material: galvanized steel.

Structure must be capable of withstanding minimum load of 5,000 lbs.
MUST be used in combination with compatible Skyhook Anchor.

Ensure all connections are chosen by a Competent Person and are compatible with the SkyMast Anchor. Refer to instructions for installation.

Attach compatible SRL to each SRL cradle. All pins must be fully secured.
NEVER attach more than 3 workers, 1 per attached SRL.

 **WARNING**

Leading Edge SRL MUST be used for all Personal Fall Arrest applications.

Avoid contact with hazards including, but not limited to, heat, electricity, chemicals, and sharp or abrasive edges and surfaces.

90103 (Rev. B) **DO NOT REMOVE LABELS** Made in China

INSPECTION GRID

User must inspect prior to EACH use. Competent Person must complete formal inspection every 6 months. Competent Person to inspect and initial.

Date of First Use: _____

Product lifetime is indefinite as long as equipment passes pre-use and Competent Person inspections.

YR MO	20__	20__	20__	20__	20__
J					
F					
M					
A					
M					
J					
J					
A					
S					
O					
N					
D					

If equipment fails inspection
IMMEDIATELY REMOVE FROM SERVICE

DO NOT REMOVE LABELS