

GUARDIAN

FALL PROTECTION



Product Name: Concrete Swivel Anchor

Part #: 00240, 00241, 00242, 00243, 00244

Instruction Manual

Do not throw away these instructions!
Read and understand these instructions before using equipment!

Introduction	1
Applicable Safety Standards	1
Worker Classifications	1
Product Specific Applications	2
Limitations	2-3
Components and Specifications	4
Installation and Use	5
Maintenance, Cleaning, and Storage	5
Inspection	5
Inspection Log	6
Safety Information	6-7
Labels	7

Introduction

Thank you for purchasing a Guardian Fall Protection Concrete Swivel Anchor. This manual must be read and understood in its entirety, and used as part of an employee training program as required by OSHA or any applicable state agency.


This and any other included instructions must be made available to the user of the equipment. The user must understand how to safely and effectively use the Concrete Swivel Anchor, and all fall safety equipment used in combination with the Concrete Swivel Anchor.

User Information	
Date of First Use:	_____
Serial #:	_____
Trainer:	_____
User:	_____

Applicable Safety Standards

When used according to instruction specifications, this product meets or exceeds all applicable OSHA 1926 Subpart M, OSHA 1910, ANSI Z359.1-2007, and ANSI A10.32-2012 standards for fall protection. Applicable standards and regulations depend on the type of work being done, and also might include state-specific regulations. Consult regulatory agencies for more information on personal fall arrest systems and associated components.

Worker Classifications

 CAUTION	Understand the following definitions of those who work near or who may be exposed to fall hazards.
--	--

Qualified Person: A person with an accredited degree or certification, and with extensive experience or sufficient professional standing, who is considered proficient in planning and reviewing the conformity of fall protection and rescue systems.

Competent Person: A highly trained and experienced person who is ASSIGNED BY THE EMPLOYER to be responsible for all elements of a fall safety program, including, but not limited to, its regulation, management, and application. A person who is proficient in identifying existing and predictable fall hazards, and who has the authority to stop work in order to eliminate hazards.

Authorized Person: A person who is assigned by their employer to work around or be subject to potential or existing fall hazards.

It is the responsibility of a Qualified or Competent person to supervise the job site and ensure all applicable safety regulations are complied with.

Product Specific Applications



WARNING Use of equipment in unintended applications may result in serious injury or death. Maximum 1 attachment per connection point.



Personal Fall Arrest: Concrete Swivel Anchor may be used to support a MAXIMUM 1 PFAS for use in Fall Arrest applications. Structure must withstand loads applied in the directions permitted by the system of at least 5,000 lbs. Maximum free fall is 6', or up to 12' if used in combination with equipment explicitly certified for such use. Applicable D-ring: Dorsal.



Restraint: Concrete Swivel Anchor may be used in Restraint applications. Restraint systems prevent workers from reaching the leading edge of a fall hazard. Always account for fully deployed length of lanyard/SRL. Structure must withstand loads applied in the directions permitted by the system of at least 1,000 lbs. No free fall is permitted. Restraint systems may only be used on surfaces with slopes up to 4/12 (vertical/horizontal). Applicable D-rings: Dorsal, Chest, Side, Shoulder.



Work Positioning: Concrete Swivel Anchor may be used in Work Positioning applications. Work Positioning systems allow a worker to be supported while in suspension and work freely with both hands. Structure must withstand loads applied in the directions permitted by the system of at least 3,000 lbs. Maximum allowable free fall is 2'. Applicable D-rings: Side, Shoulder.



Rescue/Confined Space: Concrete Swivel Anchor may be used in Rescue/Confined Space applications. Rescue systems function to safely recover a worker from a confined location or after exposed to a fall. There are various configurations of Rescue systems depending on the type of rescue. Structure must withstand loads applied in the directions permitted by the system of at least 3,000 lbs. No free fall is permitted. Applicable D-rings: Dorsal, Chest, Shoulder.


For all applications: worker weight capacity range (including all clothing, tools, and equipment) is 130-420 lbs.

Limitations

Fall Clearance: There must be sufficient clearance below the anchorage connector to arrest a fall before the user strikes the ground or an obstruction. When calculating fall clearance, account for a MINIMUM 3' safety factor, deceleration distance, user height, length of lanyard/SRL, and all other applicable factors.

Diagram shown is an example fall clearance calculation ONLY.

Swing Falls: Prior to installation or use, make considerations for eliminating or minimizing all swing fall hazards. Swing falls occur when the anchor is not directly above the location where a fall occurs. Always work as close to in line with the anchor point as possible. Swing falls significantly increase the likelihood of serious injury or death in the event of a fall.

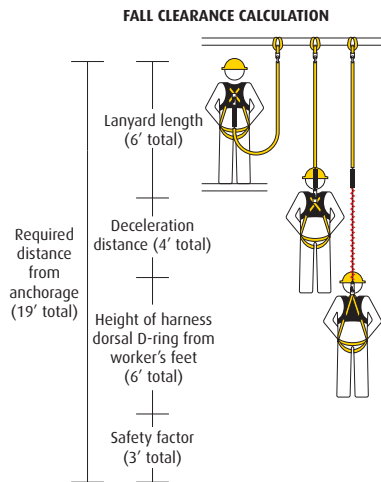

Compatibility: When making connections with Concrete Swivel Anchor, eliminate all possibility of roll-out. Roll-out occurs when interference between a hook and the attachment point causes the hook gate to unintentionally open and release. All connections must be selected and deemed compatible with Concrete Swivel Anchor by a Competent Person. All connector gates must be self-closing and self-locking, and withstand minimum loads of 3,600 lbs. See the following for examples of compatible/incompatible connections:

Connector closed and locked to D-ring. **OK.**



Connector to integral lanyard. **NO.**

Two or more snap hooks or carabiners connected to each other. **NO.**




Connector directly to webbing. **NO.**

Two connectors to same D-ring. **NO.**



Application that places load on gate. **NO.**

Incompatible or irregular application, which may increase risk of roll-out. **NO.**




Connector directly to horizontal lifeline. **NO.**

Correct Anchorage Positioning:

This chart details allowable working zones required to reduce risk of swing falls and improper side loading. **ALWAYS** adhere to information specified by chart.

Anchor Distance From Leading Edge (Y)	Working Distance Along Roof Edge (Either Direction) (X)	Working Angle From Perpendicular (θ)
6'	8'	53°
10'	9' - 9"	45°
15'	11' - 7"	38°
20'	13' - 3"	33°
25'	14' - 6"	30°
30'	16'	28°
35'	17' - 2"	26°
40'	18' - 3"	24°
45'	19' - 4"	23°
50'	19' - 10"	21°
55'	21' - 4"	21°
60'	22' - 3"	21°

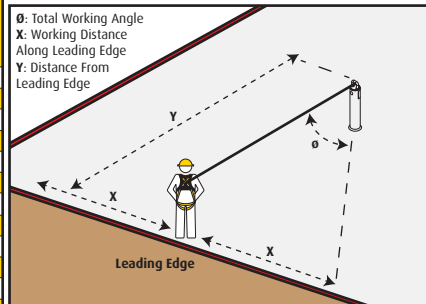


For example, if the anchorage connector is 6' from the leading edge (Y), the working distance (X) is 8' in each direction from the perpendicular, which translates to a 53° working angle.

Components and Specifications

Materials: galvanized steel and stainless steel.

Part #	Description
00240	Concrete Swivel Anchor D-ring and Bracket Assembly
00241	Concrete Swivel Anchor Bolt HSL-3-B M 12/5
00242	Concrete Swivel Anchor Kit. Includes (1) #00240 & (1) #00241
00243	Concrete Swivel Anchor Bolt (#00241) 5-Pack
00244	Concrete Swivel Anchor Bolt (#00241) 12-Pack

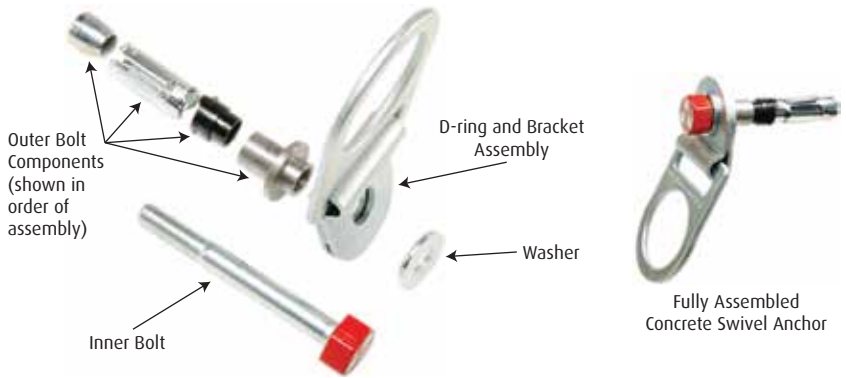

Installation and Use

Prior to use, plan your system:


1. Ensure all PFAS equipment is selected and deemed compatible with Concrete Swivel Anchor by a Competent Person.
2. Make considerations for eliminating or minimizing all swing fall hazards.
3. Mounting hole must be AT LEAST 15" away from any obstruction that might prevent D-ring from swiveling freely when PFAS is attached.
4. Ensure selected substrate is compatible with Concrete Swivel Anchor, and is free of any debris, rust, cracking, deformation, and hazardous materials.

Substrate requirements:

- **DO NOT install onto wood, steel, hollow block, grout, or lightweight concrete.**
- **Concrete MUST be at least 3,000 psi.**
- **Concrete MUST be at least 6¼" thick.**

Installation:

1. Use rotary hammer and drill bit (bit size: 11/16", 3/4", or 18mm). **Hole MUST be 4--3/8" deep.**

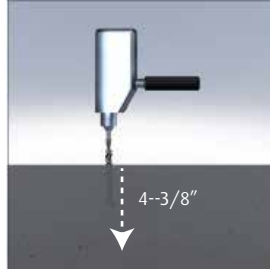

2. Clean hole using compressed air. Ensure hole is fully clean of all debris.

3. Disassemble bolt.

4. Reassemble bolt with Concrete Swivel Anchor D-ring and Bracket Assembly. In order, pass Inner Bolt through Washer, D-ring and Bracket Assembly, and Outer Bolt Components (see image on right). Ensure bolt end cap (#6) is hand-tight and fully secure.



5. Use a hammer to drive Concrete Swivel Anchor and bolt into hole. D-ring bracket must be flush against work surface. DO NOT expand bolt before fully installing Concrete Swivel Anchor in hole.

6. Use 15/16" wrench to expand bolt. Torque to 59 ft.-lbs. Red cap of Concrete Swivel Anchor bolt will break off once proper torque is reached.



7. Attach complete and compatible PFAS to Concrete Swivel Anchor D-ring.

Maintenance, Cleaning, and Storage

If Concrete Swivel Anchor fails inspection in any way, immediately remove it from service, and contact Guardian to inquire about its return or repair.

Cleaning after use is important for maintaining the safety and longevity of Concrete Swivel Anchor. Remove all dirt, corrosives, and contaminants from Concrete Swivel Anchor before and after each use. If Concrete Swivel Anchor cannot be cleaned with plain water, use mild soap and water, then rinse and wipe dry. NEVER clean Concrete Swivel Anchor with corrosive substances.

When not in use, store equipment where it will not be affected by heat, light, excessive moisture, chemicals, or other degrading elements.

Inspection

Prior to EACH use, inspect Concrete Swivel Anchor for deficiencies, including, but not limited to, corrosion, deformation, pits, burrs, rough surfaces, sharp edges, cracking, rust, paint buildup, excessive heating, alteration, and missing or illegible labels. IMMEDIATELY remove Concrete Swivel Anchor from service if defects or damage are found, or if exposed to forces of fall arrest.

Ensure that applicable work area is free of all damage, including, but not limited to, debris, rot, rust, decay, cracking, and hazardous materials. Ensure that selected work area will support the application-specific minimum loads set forth in this instruction manual. Work area MUST be stable.

At least every 6 months, a Competent Person other than the user must inspect Concrete Swivel Anchor. **Competent Person inspections MUST be recorded in inspection log in instruction manual and on equipment inspection grid label. The Competent Person must sign their initials in the box corresponding to the month and year the inspection took place.**

During inspection, consider all applications and hazards Concrete Swivel Anchor have been subjected to.

Inspection Log

Date of First Use: _____.

Product lifetime is indefinite as long as it passes pre-use and Competent Person inspections. User must inspect prior to EACH use. Competent Person other than user must complete formal inspection at least every 6 months. Competent Person to inspect and initial.

This inspection log must be specific to one Concrete Swivel Anchor. Separate inspection logs must be used for each Concrete Swivel Anchor. All inspection records must be made visible and available to all users at all times.

	J	F	M	A	M	J	J	A	S	O	N	D
YR												
YR												
YR												
YR												
YR												

**If equipment fails inspection
IMMEDIATELY REMOVE FROM SERVICE.**

Safety Information



Failure to understand and comply with safety regulations may result in serious injury or death. Regulations included herein are not all-inclusive, are for reference only, and are not intended to replace a Competent Person's judgment or knowledge of federal or state standards.

Do not alter equipment. Do not misuse equipment.

Workplace conditions, including, but not limited to, flame, corrosive chemicals, electrical shock, sharp objects, machinery, abrasive substances, weather conditions, and uneven surfaces, must be assessed by a Competent Person before fall protection equipment is selected.

Fall protection systems must be selected and installed under the supervision of a Competent Person, and used in a compliant manner. Fall protection systems must be designed in a manner compliant with all federal, state, and safety regulations. Forces applied to anchors must be calculated by a Competent Person.

The analysis of the workplace must anticipate where workers will be performing their duties, the routes they will take to reach their work, and the potential and existing fall hazards they may be exposed to. Fall protection equipment must be chosen by a Competent Person. Selections must account for all potential hazardous workplace conditions. All fall protection equipment should be purchased new and in an unused condition.

Unless explicitly stated otherwise, the maximum allowable free fall distance for lanyards must not exceed 6'. No free fall allowed for non-LE SRLs. Class A SRLs must arrest falls within 24"; Class B SRLs must arrest falls within 54".

Harnesses and connectors selected must be compliant with manufacturer's instructions, and must be of compatible size and configuration. Snap hooks, carabiners, and other connectors must be selected and applied in a compatible fashion. All risk of disengagement must be eliminated. All snap hooks and carabiners must be self-locking and self-closing, and must never be connected to each other.

A pre-planned rescue procedure in the case of a fall is required. The rescue plan must be project-specific. The rescue plan must allow for employees to rescue themselves, or provide an alternative means for their prompt rescue. Store rescue equipment in an easily accessible and clearly marked area.

Training of Authorized Persons to correctly erect, disassemble, inspect, maintain, store, and use equipment must be provided by a Competent Person. Training must include the ability to recognize fall hazards, minimize the likelihood of fall hazards, and the correct use of personal fall arrest systems.

NEVER use fall protection equipment of any kind to hang, lift, support, or hoist tools or equipment, unless explicitly certified for such use.

Equipment subjected to forces of fall arrest must immediately be removed from use.

Age, fitness, and health conditions can seriously affect the worker should a fall occur. Consult a doctor if there is any reason to doubt a user's ability to withstand and safely absorb fall arrest forces or perform set-up of equipment. Pregnant women and minors must not use this equipment.

Physical harm may still occur even if fall safety equipment functions correctly. Sustained post-fall suspension may result in serious injury or death. Use trauma relief straps to reduce the effects of suspension trauma.

Labels

GUARDIAN
FALL PROTECTION

1-800-466-6385
www.guardianfall.com

6305 S. 231st St.
Kent, WA 98032

Concrete Swivel Anchor

Part #: 00240

Date of
Manufacture: XXXXXXXXXX


90190
(Rev. C)



Inspection Grid:

Inspect prior to each use.
Competent Person must inspect
and record at least every 6 months.


	J	F	M	A	M	J	J	A	S	O	N	D
YR												
YR												
YR												
YR												
YR												



ANSI Z359.1-07, ANSI A10.32-12, OSHA 1910, and OSHA 1926 Subpart M.

Maximum 1 connection per anchor.
Capacity range: 130-420 lbs.
(including all equipment)
Minimum breaking strength: 5,000 lbs.
Materials: galvanized steel and stainless steel.

**ALWAYS USE WITH COMPATIBLE EQUIPMENT.
ONLY MAKE COMPATIBLE CONNECTIONS. REFER TO INSTRUCTIONS.**



WARNING

Prior to use, read and understand manufacturer's instructions provided with equipment. Alteration, abuse, or misuse of this product may result in serious injury or death. Take caution when using in electrical, high heat, or corrosive environments.

IMMEDIATELY REMOVE FROM USE IF EXPOSED TO FORCES OF FALL ARREST. DO NOT REMOVE LABELS.

Made in China

